


200 kg. Badebænk / 200 kg Shower stool; art. 310145 + 310144(ryg/backrest)

10 Komplet teleskopben / Complete leg 310172

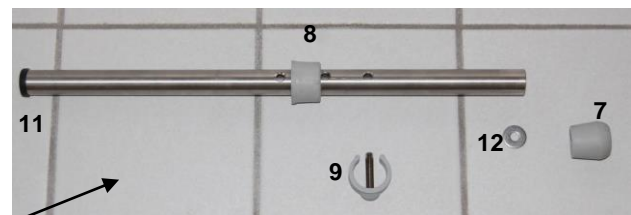

Pos.	Reservedel / Spare part	Art. No.
1	Baderyg lamel øverste Upper lamella for back.	310153
2	Baderyg lamel nederste Lower lamella for back.	310154
3	Montagesæt til ryg, 4skruer, 4afstandsstk. i pose Screws for assembling of back. (4 pieces)	800136
4	Popnitte Pop rivet	800002
5	Badebænklamel midt 70 cm Central seat lamella 70cm	310170
6	Badebænklamel yder 70cm Outer seat lamella 70cm	310171
	Komplet sæt lameller til sæde Complete set of lamella for seat	310172
7	Dupsko Rubber feet	310017
8	Kravebøsning Bush	310021
9	Clips til højdejustering, grå Clip for height adjustment, grey	310065
9	Clips til højdejustering, magenta Clip for height adjustment, magenta	310165
10	Teleskopben (inkl. clips, dupsko og kravebøsning) Complete telescopic leg.	310172
11	Sort prop til teleskopben Plastic ferrule for telescopicleg.	800298
12	Skive til dupsko til 200/300 kg badestole Spacer for rubber feet for 200/300 kg shower stools	800366

**HMN** since 1934