


**Neptun Supersoft badebænk forflytningsbadebænk/  
Neptun Super soft transfer shower stool; art. 312010**



7 Komplet ben / Complete leg: 312033

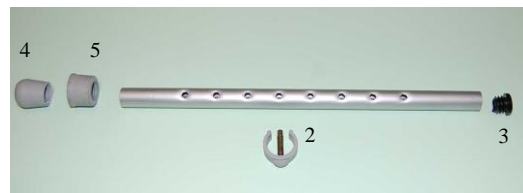

Pos.	Reservedel / Spare part	Art. No.
1	Skum ryg / Foam back	800300
2	Clips til højdejustering, grå / clip for height adjustment, grey	310065
2	Clips til højdejustering, magenta / clip for height adjustment, magenta	310165
3	Sort prop til teleskopben / Black ferrule for telescopic leg	800298
4	Hmn01 (Dupsko) / Rubber foot.	310017
5	Hmn02 (Kravebøsning) / Rubber collar	310021
6	Teleskopben (inkl. clips, dupsko og kravebøsning) Telescopic leg (complete with clips and rubber shoes)	312033
7	Skumsæde / Foam seat	800301



**HMN** since 1934